Heated seats

From September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

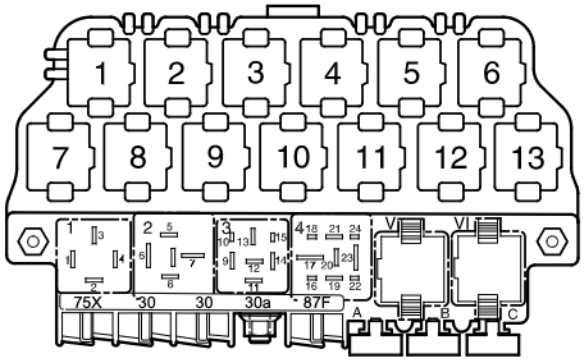

3B–20676

Relay location on the eightfold auxiliary relay panel, behind relay panel:

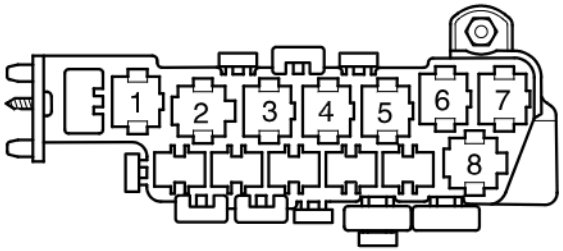

3B–20515

Note:

- *Number in parentheses indicates production control number stamped on relay housing.*

Fuse colors

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

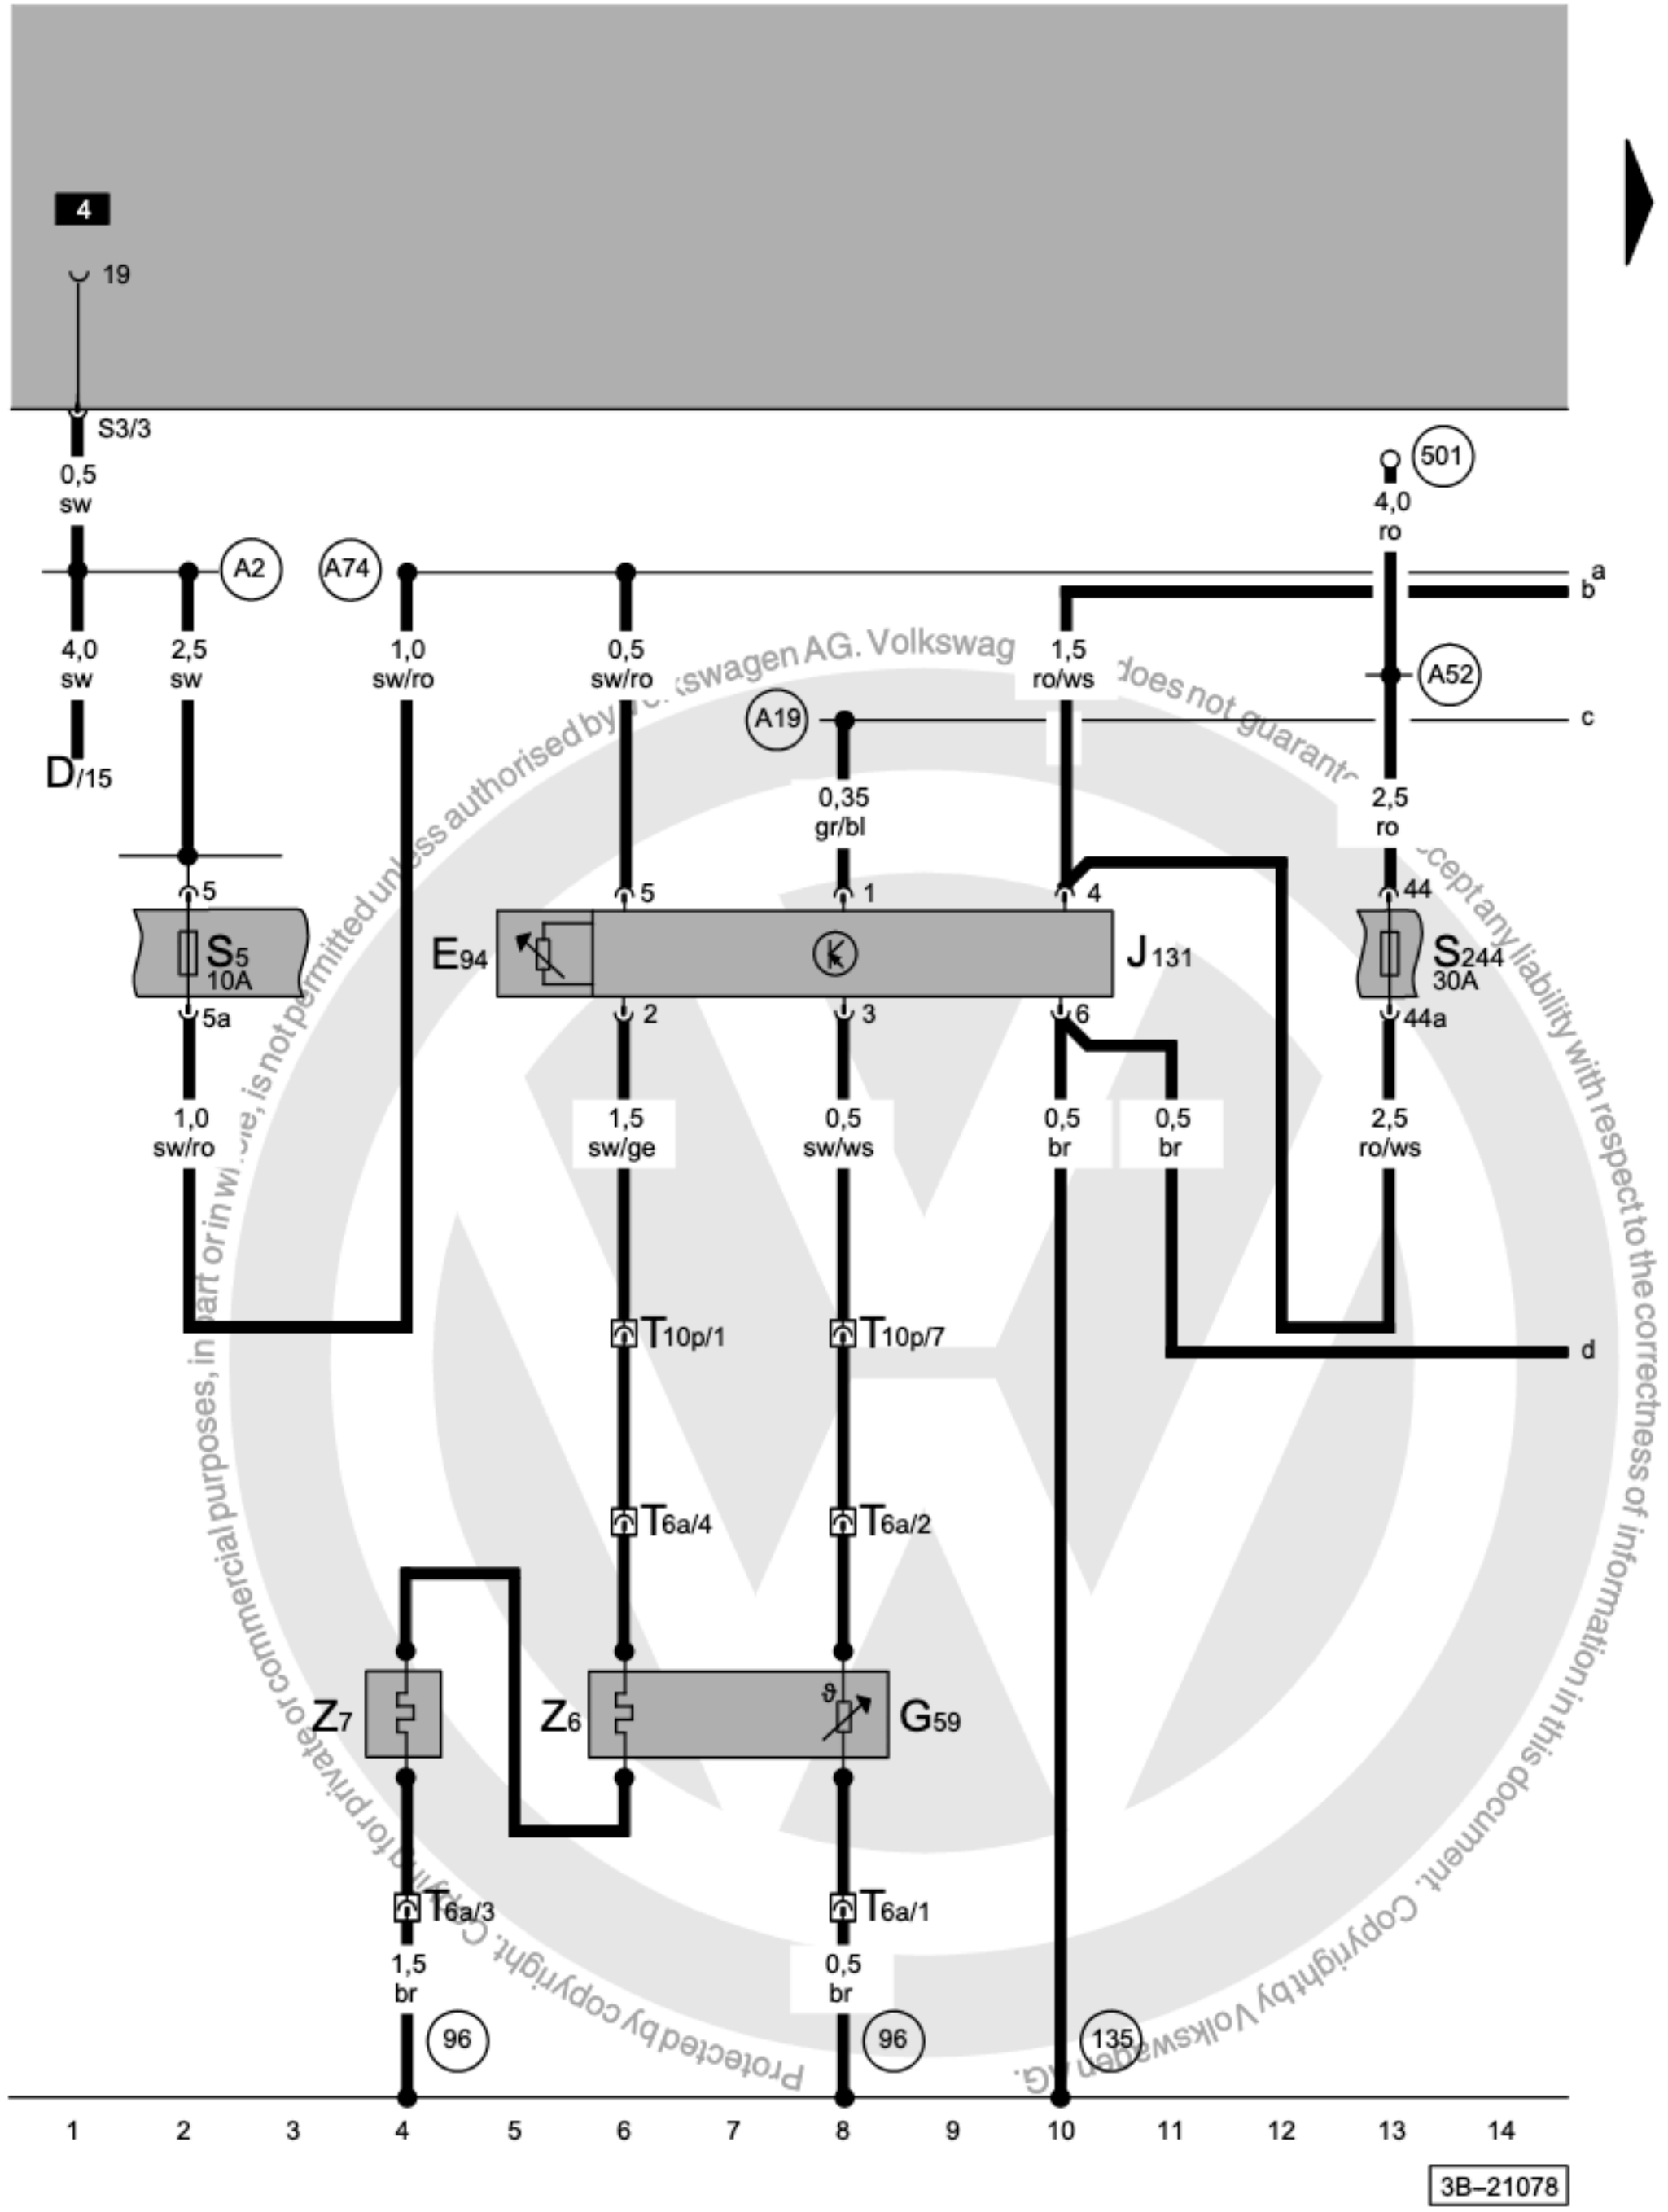

Driver's heated seat control module, temperature sensor, driver's seat heating element, driver's backrest heating element

D	Ignition/Starter Switch
E94	Adjuster for hested driver's seat
G59	Driver's Heated Seat Temperature Sensor
J131	Driver's Heated Seat Control Module
S5	Fuse 5 in fuse holder
S244	Fuse 44 in fuse holder
T6a	6-Pin Connector, green
T10p	10-Pin Connector, brown, connector station A-pillar, right
Z6	Driver's Seat Heating Element
Z7	Driver's Backrest Heating Element
96	Ground connection -1-, iin heated seats wiring harness
135	Ground connection -2-, in instrument panel wiring harness
501	Screw connection -2- (30), on relay panel
A2	plus connection (15), in instrument panel wiring harness
A19	wire connection (58d), in instrument panel wiring harness
A52	plus connection (30), in instrument panel wiring harness
A74	Connector (15a - fuse 5), in instrument panel wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Passenger's heated seat control module, temperature sensor, passenger's seat heating element, passenger's backrest heating element

E95	Adjuster for hested passenger seat
G60	Passenger's Heated Seat Temperature Sensor
J132	Passenger's Heated Seat Control Module
T6b	6-Pin Connector, green
T10p	10-Pin Connector, brown, connector station A-pillar, right
Z8	Passenger's Seat Heating Element
Z9	Passenger's Backrest Heating Element
32	Ground connection, behind instrument panel, left
81	Ground connection -1-, in instrument panel wiring harness
96	Ground connection -1-, iin heated seats wiring harness
135	Ground connection -2-, in instrument panel wiring harness
A19	wire connection (58d), in instrument panel wiring harness
A74	Connector (15a - fuse 5), in instrument panel wiring harness

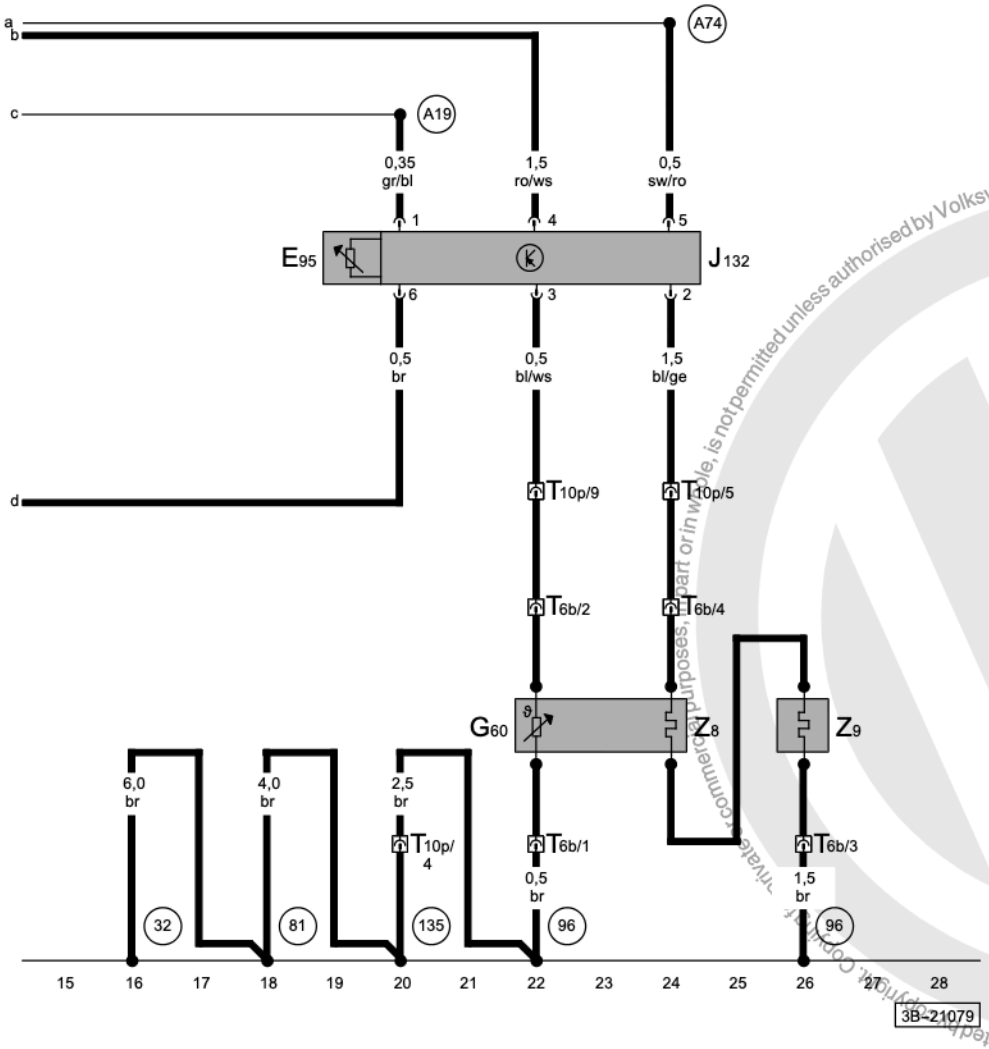

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copyright by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG. Private commercial purposes, part or in whole, is not permitted unless authorised by Volkswagen AG.